




PIPE TOOLS & VISES
SINCE 1896

Quick Release™ Tubing Cutter

- Copper, Aluminum & Stainless Steel Tubing
- Plastic Pipe & Tubing

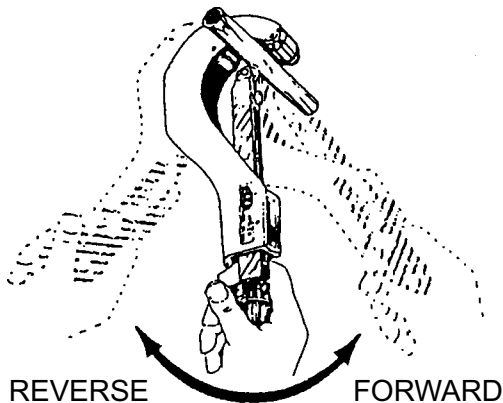

Operating Instructions

1. Open the cutter by pressing the zip nut. Place the cutter around the section of pipe or tubing to be cut. Bring the rollers up against the piece to be cut.
2. Line up the cutter wheel with your cut-off mark. Push in on the knob to bring the wheel up against pipe or tubing.
3. Turn the knob clockwise and penetrate the pipe or tubing approximately 1/46".
4. Rock the cutter back and forth a couple of inches, make one full rotation forward to insure tracking and then reverse rotation and complete the cut.

Reed Manufacturing Co.

1425 West 8th St.


Erie, PA 16502 USA

Phone: 800-666-3691 or 814-452-3691

Fax: 800-456-1697 or 814-455-1697



PIPE TOOLS & VISES
SINCE 1896

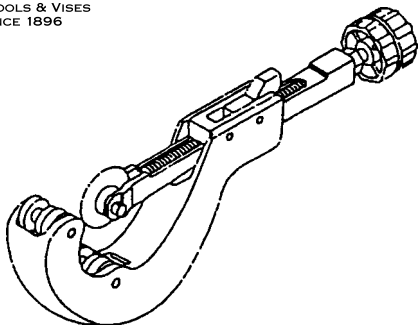

Cutter Wheel Selection Chart

Cutter	Copper Aluminum, Brass, Steel Tubing	Stainless Steel Tubing	PE,PB PP, ABS	PVC	Heavy Wall Plastics
TC10	O	OSS	OP2	1-2PVC	1-2PVC
TC1.6Q	O	OSS	OP2	1-2PVC	1-2PVC
TC2Q	O	OSS	OP2	1-2PVC	1-2PVC
TC3Q	30-40	30-40SS	30-40P	3-6PVC	6QP
TC4Q	30-40	30-40SS	30-40P	3-6PVC	6QP
TC5Q	30-40	30-40SS	30-40P	3-6PVC	6QP
TC6Q	30-40	30-40SS	30-40P	3-6PVC	6QP
TC8Q	N/A	N/A	80P	680PVC	680PVC

Notes:

1. For less burr, use more gradual feed.
2. For long wheel life, avoid side pressure and feeding wheel into pipe too fast.
3. For cutting 6" -48" (150-1300mm) pipe with air or hydraulic power see REED Universal Pipe Cutters.